

How to remove speed dials

Last Modified on 10/25/2022 9:24 am PDT

1. Press the *Options* button.
2. Enter your password and press *OK*.
3. Scroll down and select the *Programs* button and press the *Edit* button.
4. Press the speed dial you want to remove.
5. Select the *Call Appearance* and press the *Select* button.
6. Press the *Exit* button to leave the current screen.