

Locating your MAC address

Last Modified on 12/13/2017 1:06 pm PST

Microsoft X-Box 360

1. Power on your XBOX 360 without a disc in the system.
2. In the "System" area of the XBOX 360 dashboard select "Network Settings".
3. Select "Edit Settings".
4. From "Advanced Settings" select "Advanced Settings".
5. On this screen you should see "Wired MAC Address" followed by the MAC address of the system.

Xbox One

1. Press the Menu button on your controller, select Settings, and then select Network.
2. Select advanced settings
3. Use Wired MAC

Sony PlayStation 3

1. Start up your PlayStation 3 without a disk in the drive.
2. Find the System Settings icon and select the X.
3. Click System Information and press the X.
4. Your Mac Address will display.

Sony PlayStation 4

1. Turn on your Playstation 4 without any disk in the drive and wait for the menu to pop up.

2. Navigate to the "Settings" icon (located on the far left).
3. Select the "System" icon under the Settings menu.
4. Select "System Information."
5. Write down your "MAC Address (LAN cable).

Sony PlayStation Vita

1. Go into Settings and then select Start.
2. Swipe up on the screen to scroll down. Select System.
3. Select System Information.
4. The MAC Address is displayed on the screen.

Nintendo Wii

1. From the Wii Channel screen select the "Wii" button then go into "Wii Settings".
2. On the second page find the option "Internet" then go under "Console Information".
3. This screen should have a line with "USB Ethernet Adapter MAC Address" or "LAN Adapter MAC Address" or similar.

Nintendo Wii U

1. From the Wii U Menu, select "System Settings."
2. Using the Left Stick select the "Internet" icon and press the A Button.
3. Select "View MAC Address" and wait a moment for the MAC address to be displayed.
4. When you are finished, tap "Back." Settings.

Nintendo Switch

1. From the HOME menu, highlight and select the System Settings Icon.
2. Select "Internet Settings."
3. Tap "Other Information."
4. Tap "Confirm MAC Address." Your system's MAC Address will be displayed on the screen.

Nintendo 3DS, 3DSXL, 2DS

1. Go into System Settings.
2. Select Internet Settings.
3. Select Other Information.
4. Select Confirm MAC Address.
5. The MAC Address is displayed on the screen.

Amazon Echo

1. Download the Amazon Alexa app to your phone or computer and sign in with your Amazon account.
2. Connect to the wireless network transmitted by your Echo device.
3. The wireless MAC address for your Echo can be found at the bottom of the Echo Setup screen in the Alexa app.

Amazon Fire Stick

1. Go to Settings > System > About > Network.
 2. Copy the MAC address.
-