

Classroom Console

Last Modified on 08/20/2025 1:02 pm PDT

Console

You will find a console like this one in every classroom.



Buttons

Display

The ON | OFF buttons turn the projector on and off as a source.

NOTE: Some classrooms require you to use the projector remote to turn the projector power on and off.



Volume

This controls the classroom speaker volume.

NOTE: This does not change your laptop volume output.




PC

Pressing the PC button will change the projector source to the desktop PC computer.



USB C

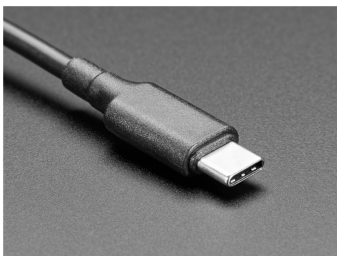

Pressing the USB C button changes the projector source to the device connected to the USB C cable - this can be a phone or laptop.



BLU - RAY

Pressing the BLU-RAY button changes the projector source to the BLU-RAY player. Use the BLU-RAY remote control with this option.



HDMI



Pressing the HDMI button changes the projector source to the device connected to the HDMI cable.



Screen Up | Down

Pressing the SCREEN UP | SCREEN DOWN button will raise or lower the projector screen.



MUTE

Pressing the MUTE button will mute the classroom speakers.

NOTE: This will not mute the source volume from the computer or laptop that is connected.

